

部 品 表

# ILLUSTRATED PARTS LIST

FOR

# SINGER

MACHINE

1591D 200A  
240A  
300A  
308A

# CONTENTS

目


次

COVERS 1 -----	1
カバー 1	
COVERS 2 -----	2
カバー 2	
BOBBIN WINDER AND BOBBIN WINDER TENSION -----	3
ボビンワインダー、ボビンワインダーテンション	
ARM SHAFT -----	4
上軸	
NEEDLE BAR AND TAKE-UP LEVER -----	5
針棒、天ビン	
PRESSER BAR, PRESSER FOOT AND PRESSER BAR LIFTER -----	6
押エ棒、自由押エ、押エ上げ	
FEED MECHANISM 1 -----	7
送り 1	
FEED MECHANISM 2 -----	8
送り 2	
FEED MECHANISM 3 -----	9
送り 3	
UPRIGHT SHAFT AND ROTATING HOOK SHAFT -----	10
堅軸、下軸	
LUBRICATING MECHANISM -----	11
給油、運送	
ACCESSORIES AND ATTACHMENTS -----	12
付属品	
PARTS AVAILABLE AT EXTRA CHARGE -----	13
別売品	

## COVERS 1


カバー 1

-1-

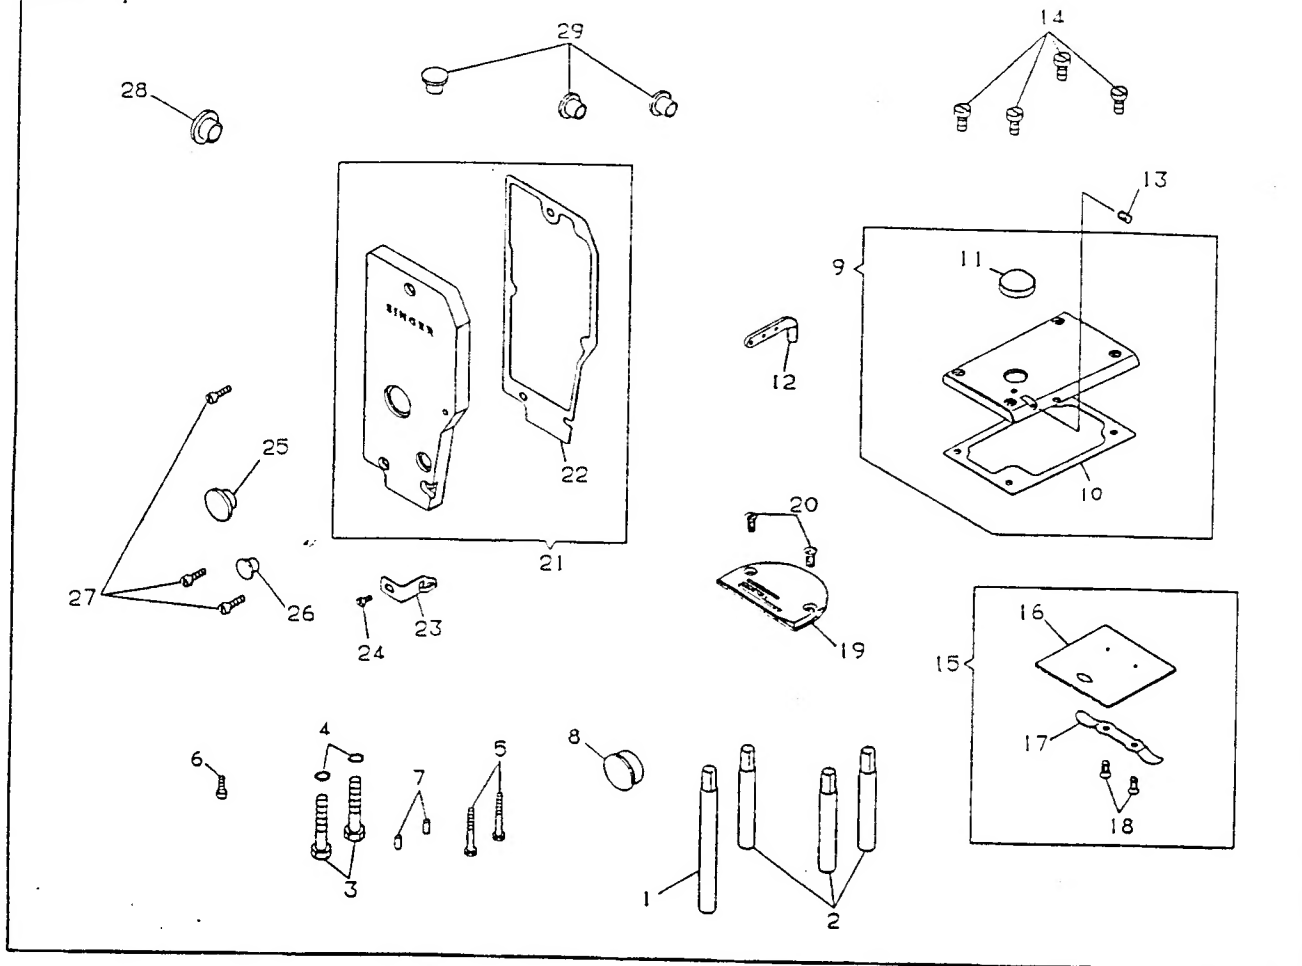

NO.	部品番号 PART NO.	0200A	0210A	0300A	数量 QTY.	名称	DESCRIPTION
1	550009	●	●	●	1	ベッド脚(長)	BED LEG (LONG)
2	550010	●	●	●	3	ベッド脚(短)	BED LEG (SHORT)
3	544368	●	●	●	2	アーム、ベッド脚メネジ(前)	ARM SCREW (FRONT)
4	543826	●	●	●	2	アーム、ベッド脚メネジ(後) 通金	ARM SCREW (FRONT) WASHER
5	545033	●	●	●	2	アーム、ベッド脚メネジ(後)	ARM SCREW (BACK)
6	504064	●	●	●	1	アーム、ベッド脚メネジ(小)	ARM SCREW (SMALL)
7	505001	●	●	●	2	アーム、ベッドノックピン	ARM DOWEL PIN
8	550011	●	●	●	1	ベッドホールプラグ	BED HOLE PLUG
9	550013-451	●	●	●	1	アーム上蓋、パッキン(通)	ARM TOP COVER AND ARM TOP COVER PACKING COMP.
10	550015	●	●	●	1	アーム上蓋パッキン	ARM TOP COVER PACKING
11	545944	●	●	●	1	オイルフローウィンドウ	OIL FLOW WINDOW
12	550020	●	●	●	1	上糸案内	THREAD GUIDE
13	544207-012	●	●	●	1	上糸案内止メネジ	THREAD GUIDE SCREW
14	544213-053	●	●	●	4	アーム上蓋固定メネジ	ARM TOP COVER SCREW
15	505317-452	●	●	●	1	スベリ板(通)	BED SLIDE COMP.
16	12431-452	●	●	●	1	スベリ板	BED SLIDE
17	154884	●	●	●	1	スベリ板バネ	BED SLIDE SPRING
18	154789-451	●	●	●	2	スベリ板バネ止メネジ	BED SLIDE SPRING SCREW
19	414464	●	●	●	1	針板(取出)	THROAT PLATE (EXP.)
	541599	●	●	●	1	針板(取内)	THROAT PLATE (DOM.)
	12482-452	●	●	●	1	針板	THROAT PLATE
	376391	●	●	●	1	針板止メネジ	THROAT PLATE SCREW
20	691-845	●	●	●	2	針板止メネジ	FACE PLATE AND FACE PLATE PACKING COMP.
21	550035-451	●	●	●	1	面板、パッキン(通)	FACE PLATE PACKING
22	550037	●	●	●	1	面板パッキン	THREAD EYELET (SIDE OF ARM)
23	368041	●	●	●	1	アーム糸通ケ(左)	THREAD EYELET (SIDE OF ARM) SCREW
24	544212-001	●	●	●	1	アーム糸通ケ(左)止メネジ	FACE PLATE LARGE PLUG
25	368063	●	●	●	1	面板プラグ(大)	FACE PLATE SMALL PLUG
26	368037	●	●	●	1	面板プラグ(小)	FACE PLATE SCREW
27	544212-004	●	●	●	3	面板止メネジ	ARM HOLE PLUG (LARGE)
28	544886	●	●	●	1	アームホールプラグ(大)	ARM HOLE PLUG (SMALL)
29	544782	●	●	●	3	アームホールプラグ(小)	


COVERS 2  
カバー 2

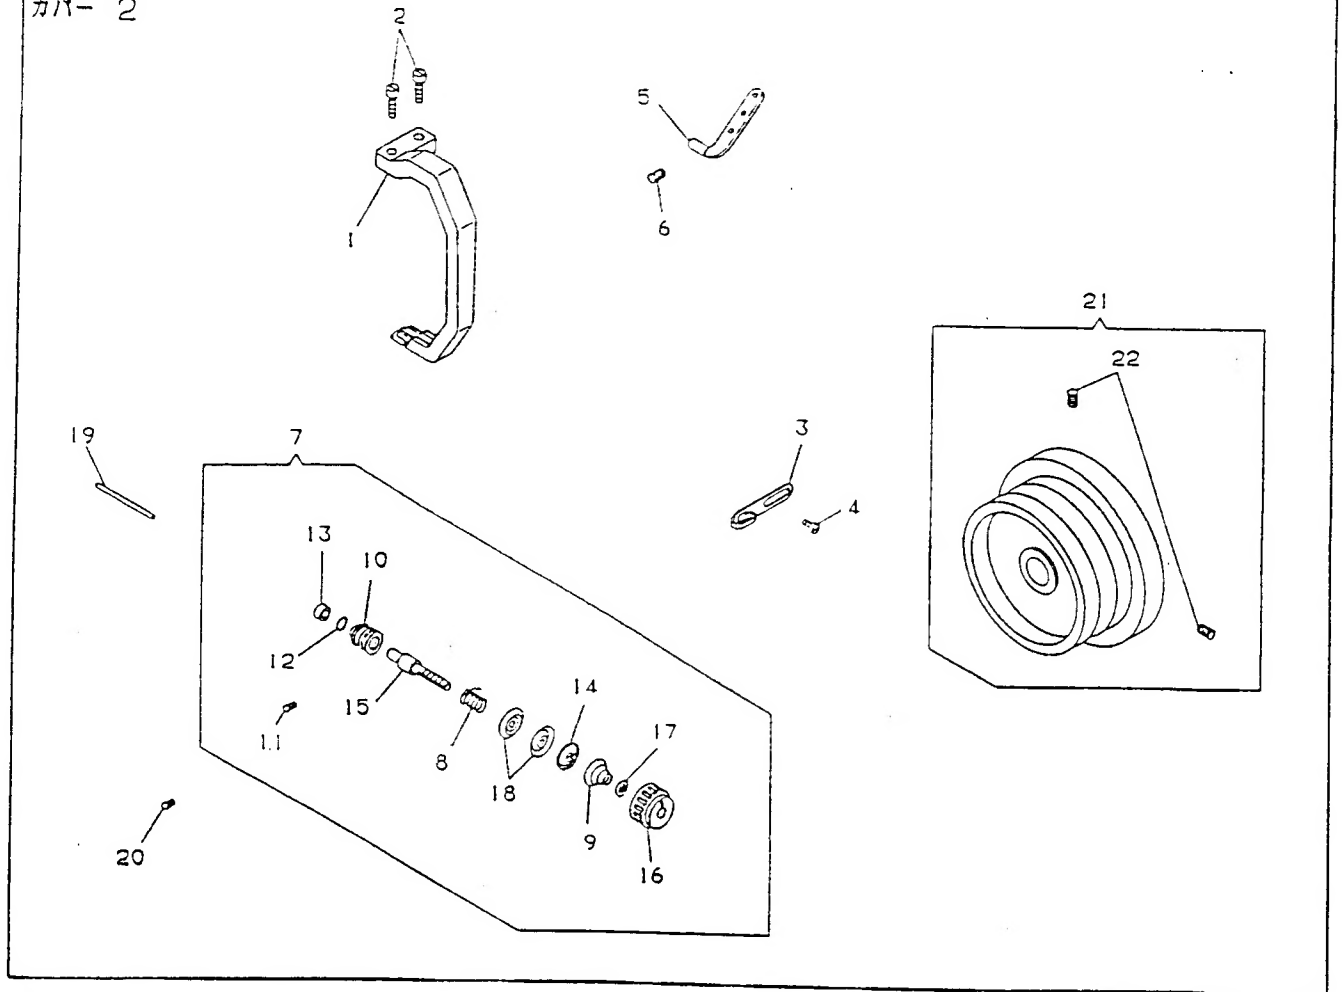

NO.	品 目 番 号 PART NO.	0200A	0210A	0100A	0108A	取 組 順 号	名 称	DESCRIPTION
1	550040-451	•	•	•	•	1	スピンガード	THREAD TAKE-UP LEVER GUARD
2	544212-012	•	•	•	•	2	スピンガード止メネジ	THREAD TAKE-UP LEVER GUARD SCREW
3	368042	•	•	•	•	1	アーム取付ネジ (右)	THREAD GUARD (SIDE OF ARM)
4	544212-001	•	•	•	•	1	アーム取付ネジ (左) 止メネジ	THREAD GUARD (SIDE OF ARM) SCREW
5	52454	•	•	•	•	1	スプリング取付ネジ	THREAD RETAINER
6	544203-001	•	•	•	•	1	スプリング取付ネジ止メネジ	THREAD RETAINER SET SCREW
7	376439-452	•	•	•	•	1	上糸調節器 (取)	TENSION COMP.
	376440-452	•	•	•	•	1	上糸調節器 (取)	TENSION COMP.
8	32758	•	•	•	•	1	糸取りバネ	THREAD TAKE-UP SPRING
9	540682	•	•	•	•	1	糸取りバネ	TENSION SPRING
	125314	•	•	•	•	1	糸取りバネ	TENSION SPRING
10	368082	•	•	•	•	1	糸取りバネ	THREAD TAKE-UP SPRING REGULATOR
11	504047	•	•	•	•	1	糸取りバネ止メネジ	TENSION STUD SET SCREW
12	540533	•	•	•	•	1	糸取りバネパッキン	THREAD TAKE-UP SPRING REGULATOR O-RING
13	540534	•	•	•	•	1	糸取りバネパッキン	THREAD TAKE-UP SPRING REGULATOR RUBBER CAP
14	414273	•	•	•	•	1	糸取りバネ取付工	TENSION RELEASING DISC
15	545898	•	•	•	•	1	糸取りバネ	TENSION STUD
16	413500-452	•	•	•	•	1	糸取りつまみ	TENSION REGULATING THUMB NUT
17	411154	•	•	•	•	1	糸取りつまみ	TENSION REGULATING THUMB NUT WASHER
18	2102	•	•	•	•	2	糸取りつまみ	TENSION DISC
19	540684	•	•	•	•	1	糸取りつまみ	TENSION RELEASING PIN
20	368430	•	•	•	•	1	糸取りバネ止メネジ	THREAD TAKE-UP SPRING REGULATOR SET SCREW
21	550044-451	•	•	•	•	1	ハズミネ (取)	MACHINE PULLEY COMP.
22	504119	•	•	•	•	2	ハズミネ止メネジ	MACHINE PULLEY SET SCREW

# BOBBIN WINDER AND BOBBIN WINDER TENSION


ボビンワインダー、ボビンワインダーテンション

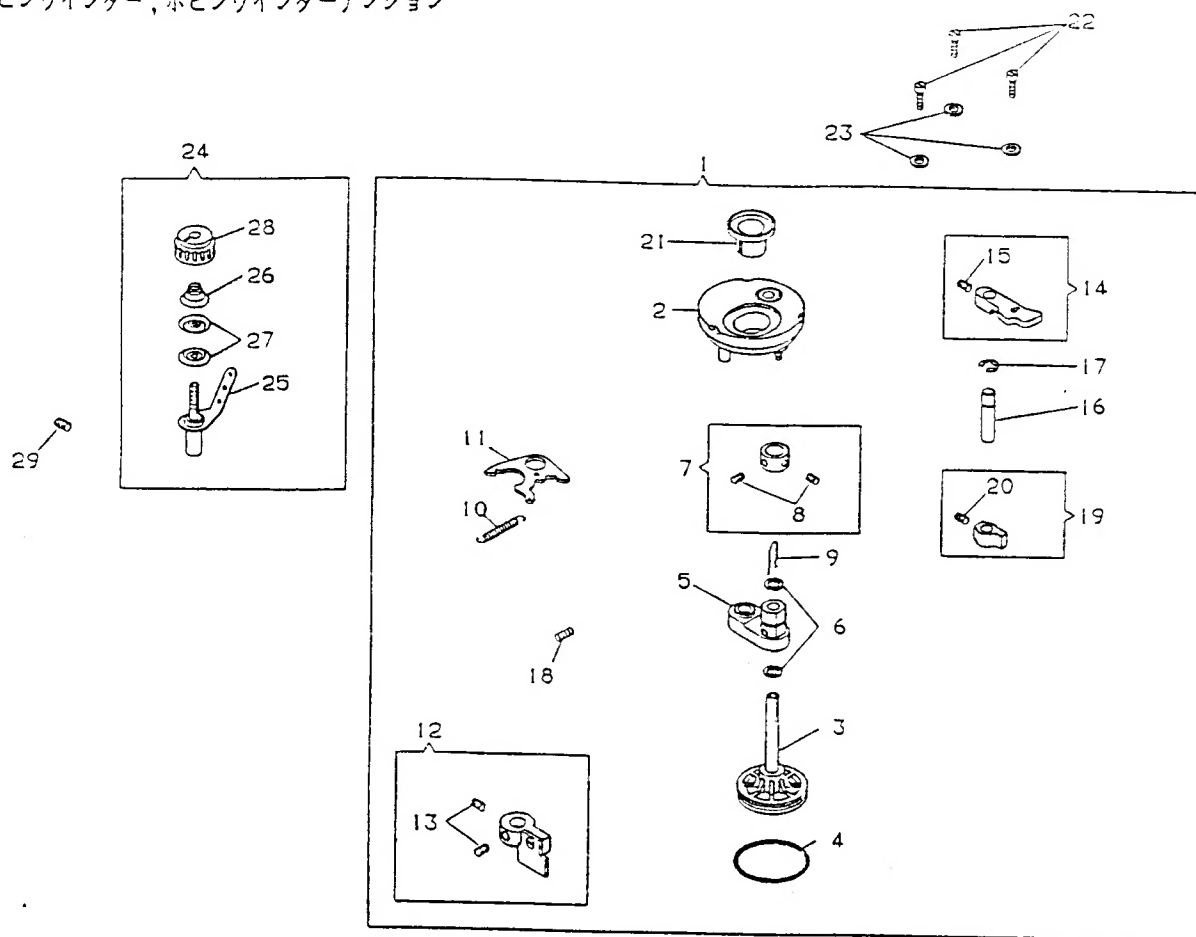

NO.	品 番 号 PART NO.	0200A	0210A	0300A	0300A	数量 QTY.	名 称	DESCRIPTION
1	550021-451	●	●	●	●	1	ボビンワインダー (組)	BOBBIN WINDER COMP.
2	550022-451	●	●	●	●	1	ボビンワインダー (体)	BOBBIN WINDER
3	550026	●	●	●	●	1	糸巻車	BOBBIN WINDER PULLEY
4	543871-022	●	●	●	●	1	糸巻車リング	BOBBIN WINDER PULLEY RING (RUBBER)
5	550028	●	●	●	●	1	糸巻車台	BOBBIN WINDER BRACKET
6	546844	●	●	●	●	2	糸巻車スラストワッシャー	BOBBIN WINDER SPINDLE THRUST WASHER
7	282758	●	●	●	●	1	糸巻車スラストカラー (組)	BOBBIN WINDER SPINDLE THRUST COLLAR COMP.
8	544206-011	●	●	●	●	2	糸巻車スラストカラー止メネジ	BOBBIN WINDER SPINDLE THRUST COLLAR SET SCREW
9	411097	●	●	●	●	1	糸巻車バネ	BOBBIN WINDER SPINDLE SPRING
10	544865	●	●	●	●	1	ボビンワインダーバネ	BOBBIN WINDER SPRING
11	368020	●	●	●	●	1	糸巻車作動板	BOBBIN WINDER BRACKET ACTUATING PLATE
12	550029	●	●	●	●	1	ボビンワインダーストップバー (組)	BOBBIN WINDER STOPPER COMP.
13	544207-013	●	●	●	●	2	ボビンワインダーストップバー止メネジ	BOBBIN WINDER STOPPER SCREW
14	550032	●	●	●	●	1	ボビンワインダーレバー (組)	BOBBIN WINDER STOP LUTCH COMP.
15	544208-005	●	●	●	●	1	ボビンワインダーレバー止メネジ	BOBBIN WINDER STOP LUTCH SET SCREW
16	368025	●	●	●	●	1	ボビンワインダーレバー軸	BOBBIN WINDER STOP LUTCH STUD
17	543860-005	●	●	●	●	1	ボビンワインダーレバー軸止メネジ	BOBBIN WINDER STOP LUTCH STUD SNAP RING
18	546847	●	●	●	●	1	糸巻車バネ	BOBBIN WINDER BRACKET SPRING
19	368026	●	●	●	●	1	糸巻車調節器 (組)	BOBBIN WINDER REGULATOR COMP.
20	544208-005	●	●	●	●	1	糸巻車調節器止メネジ	BOBBIN WINDER REGULATOR SET SCREW
21	368028	●	●	●	●	1	ボビン受	BOBBIN WINDER SPINDLE THREAD GUARD
22	544217-001	●	●	●	●	1	ボビンワインダー止メネジ	BOBBIN WINDER SCREW
23	548061	●	●	●	●	3	ボビンワインダー止メネジ座金	BOBBIN WINDER SCREW WASHER
24	368029	●	●	●	●	1	ボビンワインダーテンション (組)	BOBBIN WINDER TENSION COMP.
25	368030	●	●	●	●	1	ボビンワインダーテンション軸 (組)	BOBBIN WINDER TENSION STUD COMP.
26	547246	●	●	●	●	1	ボビンワインダーテンションバネ	BOBBIN WINDER TENSION SPRING
27	547247	●	●	●	●	2	ボビンワインダーテンション両子通	BOBBIN WINDER TENSION DISC
28	368033	●	●	●	●	1	ボビンワインダーテンションフタ	BOBBIN WINDER TENSION REGULATING THUMB NUT
29	544204-001	●	●	●	●	1	ボビンワインダーテンション止メネジ	BOBBIN WINDER TENSION SET SCREW

# ARM SHAFT


上軸

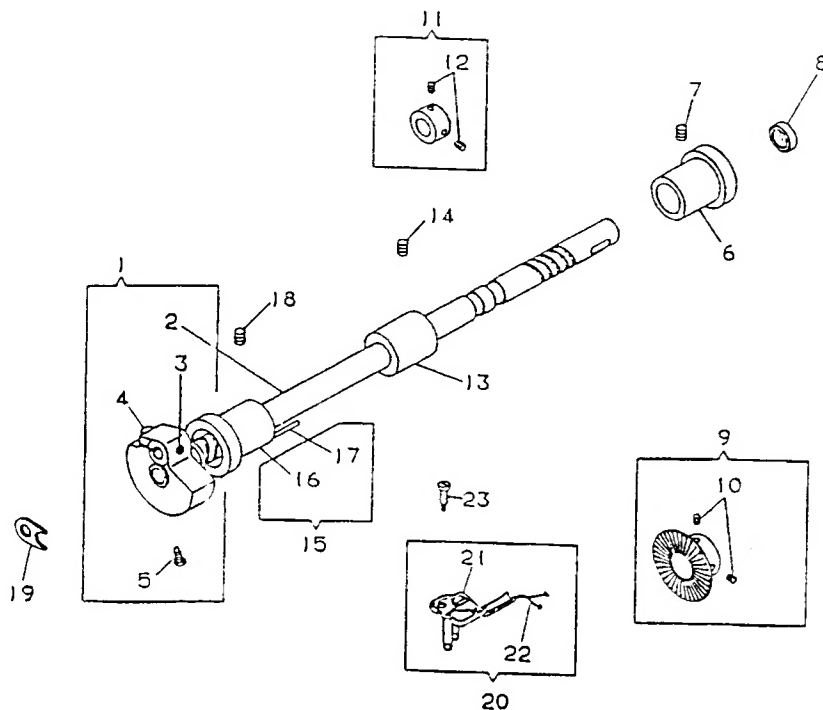

NO.	PART NO.	0200A	0210A	0300A	0300A	QTY.	名 称	DESCRIPTION
1	376353	•	•	•	•	1	上軸, 内合クラック (組)	ARM SHAFT (HORIZONTAL) AND NEEDLE BAR CRANK COMP.
2	376352	•	•	•	•	1	上軸 (組)	ARM SHAFT (HORIZONTAL)
3	504095	•	•	•	•	1	針棒クラック止メネジ	THREAD TAKE-UP CRANK SET SCREW
4	504117	•	•	•	•	1	針棒クラック留メネジ	THREAD TAKE-UP CLAMPING SCREW
5	374100	•	•	•	•	1	内合クラック止メネジ	NEEDLE BAR CRANK POSITION SCREW
6	540706	•	•	•	•	1	上軸メタル (後)	ARM SHAFT (HORIZONTAL) FLANGED BUSHING (BACK)
7	504002	•	•	•	•	1	上軸メタル (後) 止メネジ	ARM SHAFT (HORIZONTAL) FLANGED BUSHING (BACK) SET SCREW
8	540707	•	•	•	•	1	上軸メタル (後) オイルシール	ARM SHAFT (HORIZONTAL) FLANGED BUSHING (BACK) OIL SEAL
9	550038	•	•	•	•	1	糸巻器蓋 (組)	BOBBIN WINDER DRIVING WHEEL COMP.
10	544207-011	•	•	•	•	2	糸巻器蓋止メネジ	BOBBIN WINDER DRIVING WHEEL SET SCREW
11	545762-001	•	•	•	•	1	上軸カラー (組)	ARM SHAFT (HORIZONTAL) THRUST COLLAR COMP.
12	504101	•	•	•	•	2	上軸カラー止メネジ	ARM SHAFT (HORIZONTAL) THRUST COLLAR SET SCREW
13	545758	•	•	•	•	1	上軸メタル (中)	ARM SHAFT (HORIZONTAL) BUSHING (CENTER)
14	504002	•	•	•	•	1	上軸メタル (中) 止メネジ	ARM SHAFT (HORIZONTAL) BUSHING (CENTER) SET SCREW
15	540720	•	•	•	•	1	上軸メタル (前) (組)	ARM SHAFT (HORIZONTAL) FLANGED BUSHING (FRONT) COMP.
16	540406	•	•	•	•	1	上軸メタル (前)	ARM SHAFT (HORIZONTAL) FLANGED BUSHING (FRONT)
17	540722	•	•	•	•	1	上軸メタル (前) オイルドレンチューブ留	ARM SHAFT (HORIZONTAL) FLANGED BUSHING (FRONT) OIL TUBE TAPE
18	504002	•	•	•	•	1	上軸メタル (前) 止メネジ	ARM SHAFT (HORIZONTAL) FLANGED BUSHING (FRONT) SET SCREW
19	540476	•	•	•	•	1	針棒クラック座金	THREAD TAKE-UP CRANK WASHER
20	543365	•	•	•	•	1	天ビンオイルウィック支エ (組)	OIL WICK HOLDER COMP.
	543366	•	•	•	•	1	天ビンオイルウィック支エ (組)	OIL WICK HOLDER COMP.
21	543363	•	•	•	•	1	天ビンオイルウィック支エ, パイプ (組)	OIL WICK HOLDER AND PIPE
	543364	•	•	•	•	1	天ビンオイルウィック支エ, パイプ (組)	OIL WICK HOLDER AND PIPE
22	545909	•	•	•	•	2	天ビンオイルウィック	OIL WICK (COTTON)
23	545051	•	•	•	•	1	天ビンオイルウィック支エ止メネジ	OIL WICK HOLDER SCREW

## NEEDLE BAR AND TAKE-UP LEVER


針棒, 天ビン

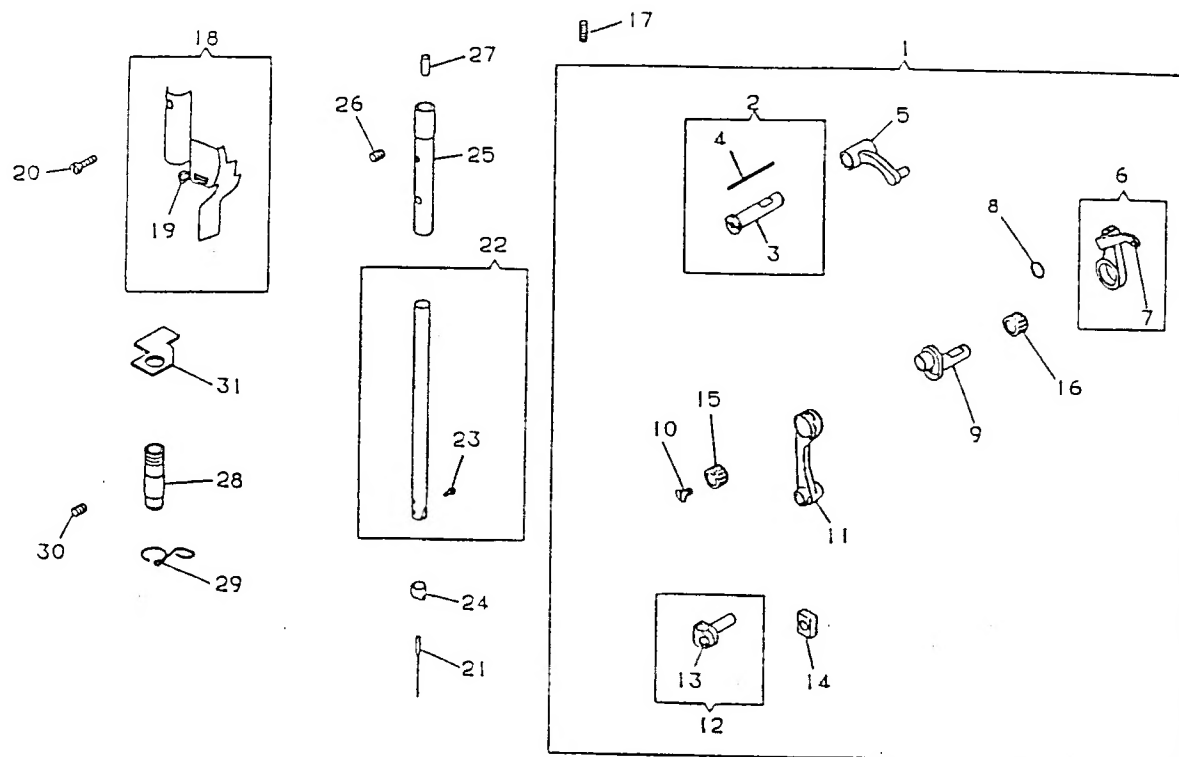

NO.	品番 PART NO.	0200A	0210A	0300A	数量 QTY.	名称	DESCRIPTION
1	550052	●	●	●	1	天ビン, 針棒クランクロッド (組)	THREAD TAKE-UP COMP.
	550054	●	●	●	1	天ビン, 針棒クランクロッド (組)	THREAD TAKE-UP COMP.
	550248	●	●	●	1	天ビン, 針棒クランクロッド (組)	THREAD TAKE-UP COMP.
2	543369	●	●	●	1	天ビン支え棒 (組)	THREAD TAKE-UP LEVER LINK HINGE STUD COMP.
3	543368	●	●	●	1	天ビン支え棒	THREAD TAKE-UP LEVER LINK HINGE STUD
4	543370	●	●	●	1	天ビン支え棒オイルワック	THREAD TAKE-UP LEVER LINK HINGE STUD OIL WICK (COTTON)
5	543367	●	●	●	1	天ビン支え	THREAD TAKE-UP LEVER LINK
6	540676	●	●	●	1	天ビン (組)	THREAD TAKE-UP LEVER COMP.
	540751	●	●	●	1	天ビン (組)	THREAD TAKE-UP LEVER COMP.
7	52130	●	●	●	1	天ビン油蓋	THREAD TAKE-UP LEVER THREAD EYELET BUSHING
8	543871-002	●	●	●	1	天ビンOリング	THREAD TAKE-UP LEVER O-RING
9	540677	●	●	●	1	針棒クランク	THREAD TAKE-UP CRANK
	540685	●	●	●	1	針棒クランク	THREAD TAKE-UP CRANK
10	504118	●	●	●	1	針棒クランクロッド止ネジ	NEEDLE BAR CONNECTING LINK CAP SCREW
11	368069	●	●	●	1	針棒クランクロッド	NEEDLE BAR CONNECTING LINK
12	544881	●	●	●	1	針棒軸ネジ (組)	NEEDLE BAR CONNECTING STUD COMP.
13	549380	●	●	●	1	針棒軸ネジメネジ	NEEDLE BAR CONNECTING STUD CLAMPING SCREW
14	143058	●	●	●	1	針棒軸ネジスライドブロック	NEEDLE BAR CONNECTING STUD SLIDE BLOCK
15	540662	●	●	●	1	針棒クランクロッドローラーベアリング	NEEDLE BAR CONNECTING LINK ROLLER BEARING
16	540662	●	●	●	1	天ビンローラーベアリング	THREAD TAKE-UP LEVER ROLLER BEARING
17	504002	●	●	●	1	天ビン支え止メネジ	THREAD TAKE-UP LEVER LINK HINGE STUD SET SCREW
18	376394	●	●	●	1	天ビンオイルガード (組)	THREAD TAKE-UP LEVER OIL GUARD COMP.
19	376396	●	●	●	1	天ビンオイルガードオイルワック	THREAD TAKE-UP LEVER OIL GUARD WICK (COTTON)
20	504063-451	●	●	●	1	天ビンオイルガード止メネジ	THREAD TAKE-UP LEVER OIL GUARD SCREW
21	N19550-114	●	●	●	1	針 (135×65#14) (組出)	NEEDLE (135X65#14) (EXP.)
	N15150-110	●	●	●	1	針 (16X95#10) (組内)	NEEDLE (16X95#10) (DOH.)
	N19550-116	●	●	●	1	針 (135×65#16) (組出)	NEEDLE (135X65#16) (EXP.)
	N15150-114	●	●	●	1	針 (16X95#14) (組内)	NEEDLE (16X95#14) (DOH.)
	N19550-121	●	●	●	1	針 (135×65#21)	NEEDLE (135X65#21)
22	540702	●	●	●	1	針棒 (組) (組出)	NEEDLE BAR (HOLLOW) COMP. (EXP.)
	376231	●	●	●	1	針棒 (組) (組内)	NEEDLE BAR (HOLLOW) COMP. (DOH.)
	540698	●	●	●	1	針棒 (組) (組出)	NEEDLE BAR (HOLLOW) COMP. (EXP.)
	376229	●	●	●	1	針棒 (組) (組内)	NEEDLE BAR (HOLLOW) COMP. (DOH.)
	543409	●	●	●	1	針棒 (組)	NEEDLE BAR (HOLLOW) COMP.
23	504112	●	●	●	1	針止メネジ	NEEDLE SET SCREW
24	375571	●	●	●	1	針棒ネジネ (組出)	NEEDLE BAR THREAD GUARD (EXP.)
	372321	●	●	●	1	針棒ネジネ (組内)	NEEDLE BAR THREAD GUARD (DOH.)
25	545841	●	●	●	1	針棒メタル (上)	NEEDLE BAR BUSHING (UPPER)
26	504129	●	●	●	1	針棒メタル (上) 止メネジ	NEEDLE BAR BUSHING (UPPER) SET SCREW
27	540703	●	●	●	1	針棒メタル (上) フェルト	NEEDLE BAR BUSHING (UPPER) FELT
28	540524	●	●	●	1	針棒メタル (下)	NEEDLE BAR BUSHING (LOWER)
	540525	●	●	●	1	針棒メタル (下)	NEEDLE BAR BUSHING (LOWER)
29	368446	●	●	●	1	針棒メタル (下) 糸通ネ	NEEDLE BAR BUSHING (LOWER) THREAD EYELET
	368495	●	●	●	1	針棒メタル (下) 糸通ネ	NEEDLE BAR BUSHING (LOWER) THREAD EYELET
30	504129	●	●	●	1	針棒メタル (下) 止メネジ	NEEDLE BAR BUSHING (LOWER) SET SCREW
31	540528	●	●	●	1	針棒メタル (下) フェルト	NEEDLE BAR BUSHING (LOWER) FELT

# PRESSER BAR, PRESSER FOOT AND PRESSER BAR LIFTER

押工棒, 自由押工, 押工上げ

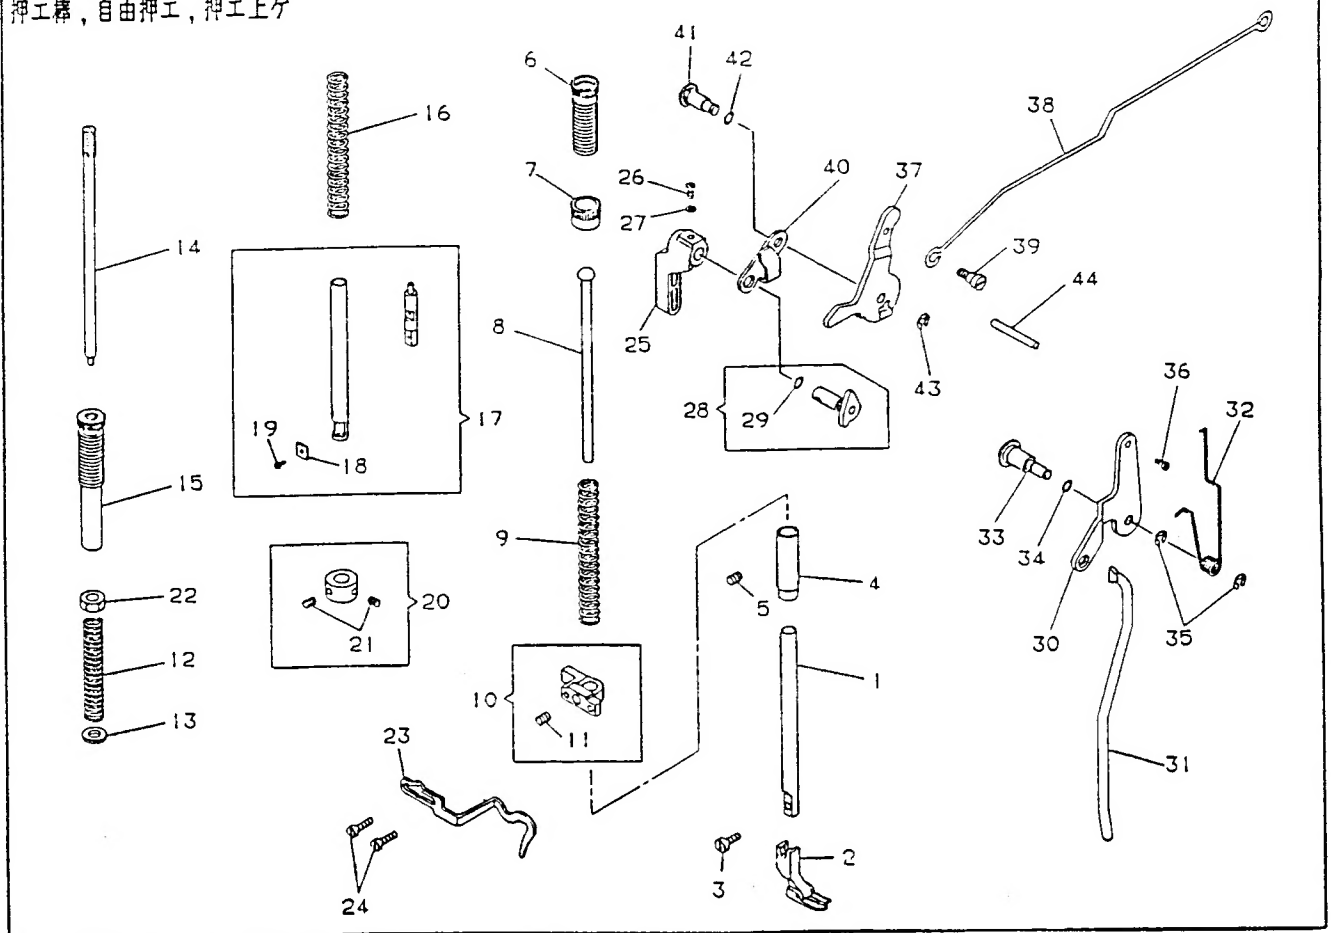


NO.	品番 PART NO.	0200A	0240A	0300A	0304A	数量 QTY.	名称	DESCRIPTION
1	545864	●	●	●	●	1	押工棒	PRESSER BAR (HOLLOW)
2	505643	●	●	●	●	1	自由押工 (通) (引出)	PRESSER FOOT (SPRING HINGED) COMP. (EXP.)
	543059	●	●	●	●	1	自由押工 (通) (留内)	PRESSER FOOT (SPRING HINGED) COMP. (IDOM.)
	543419	●	●	●	●	1	自由押工 (通)	PRESSER FOOT (SPRING HINGED) COMP.
	541585-002	●	●	●	●	1	自由押工 (通)	PRESSER FOOT (SPRING HINGED) COMP.
3	504063-451	●	●	●	●	1	自由押工止めネジ	PRESSER FOOT SCREW
4	505649	●	●	●	●	1	押工棒メタル	PRESSER BAR BUSHING (LOWER)
5	504129	●	●	●	●	1	押工棒メタル止めネジ	PRESSER BAR BUSHING (LOWER) SET SCREW
6	376423	●	●	●	●	1	押工調整ネジ	PRESSURE REGULATING SCREW
7	376424	●	●	●	●	1	押工調整ネジナット	PRESSURE REGULATING SCREW NUT
8	414342	●	●	●	●	1	押工調整ネジ案内溝	PRESSURE REGULATING SCREW GUIDE ROD
9	414341	●	●	●	●	1	押工棒ハネ	PRESSER BAR SPRING
10	550056	●	●	●	●	1	押工棒ガイドキ (通)	PRESSER BAR GUIDE BRACKET COMP.
11	504095	●	●	●	●	1	押工棒ガイドキ止めネジ	PRESSER BAR GUIDE BRACKET SCREW
12	505575	●	●	●	●	1	押工棒ハネ	PRESSER BAR SPRING
13	111170	●	●	●	●	1	押工棒ハネ固定金	PRESSER BAR SPRING WASHER
14	544425	●	●	●	●	1	押工調整ネジ	PRESSURE REGULATING THUMB SCREW
15	544424	●	●	●	●	1	押工調整ネジ	LOW PRESSURE ADJUSTING SCREW
16	410941	●	●	●	●	1	押工取付用ハネ	PRESSER FOOT SPRING (COMPRESSION)
17	410988	●	●	●	●	1	押工棒 (通)	PRESSER BAR (HOLLOW)
18	410944	●	●	●	●	1	押工棒リテーナ	PRESSER FOOT RETAINER
19	549013	●	●	●	●	1	押工棒リテーナ止めネジ	PRESSER FOOT RETAINER SCREW
20	410942	●	●	●	●	1	押工棒カラー (通)	PRESSER BAR COLLAR COMP.
21	544207-011	●	●	●	●	2	押工棒カラー止めネジ	PRESSER BAR COLLAR SCREW
22	545403	●	●	●	●	1	押工調整ネジロックナット	PRESSURE REGULATING THUMB SCREW LOCK NUT
23	550075	●	●	●	●	1	糸調子板	SLACK THREAD REGULATOR COMP.
24	544212-001	●	●	●	●	2	糸調子板止めネジ	SLACK THREAD REGULATOR SCREW
25	550058-451	●	●	●	●	1	押工上げ	PRESSER BAR LIFTER
26	544212-055	●	●	●	●	1	押工上げ止めネジ	PRESSER BAR LIFTER SET SCREW
27	543804-003	●	●	●	●	1	押工上げ止めネジ固定金	PRESSER BAR LIFTER SET SCREW WASHER
28	550059	●	●	●	●	1	押工上げカム (通)	PRESSER BAR LIFTER CAM COMP.
29	543871-003	●	●	●	●	1	押工上げカムOリング	PRESSER BAR LIFTER CAM SHAFT O-RING
30	550069	●	●	●	●	1	鐘上げ連動棒	BELL CRANK CONNECTING ARM
31	550070	●	●	●	●	1	鐘上げ連動棒 (押し)	BELL CRANK CONNECTING ROD (PUSH)
32	550071	●	●	●	●	1	鐘上げ連動棒戻りシバネ	BELL CRANK CONNECTING ARM SPRING
33	550072	●	●	●	●	1	鐘上げ連動棒戻りネジ	BELL CRANK CONNECTING ARM HINGE SCREW
34	543871-008	●	●	●	●	1	鐘上げ連動棒戻りネジOリング	BELL CRANK CONNECTING ARM HINGE SCREW O-RING
35	543801-006	●	●	●	●	2	鐘上げ連動棒戻り止めネジ	BELL CRANK CONNECTING ARM HINGE SCREW SNAP RING
36	368089	●	●	●	●	1	鐘上げ連動棒 (引き) 戻りネジ (裏)	BELL CRANK CONNECTING ROD (PULL) STUD SCREW (BACK)
37	550063	●	●	●	●	1	押工上げ爪	PRESSER BAR LIFTER ARM
38	550064	●	●	●	●	1	鐘上げ連動棒 (引き)	BELL CRANK CONNECTING ROD (PULL)
39	368089	●	●	●	●	1	鐘上げ連動棒 (引き) 戻りネジ (表)	BELL CRANK CONNECTING ROD (PULL) STUD SCREW (FRONT)
40	550065	●	●	●	●	1	押工上げ案内板	PRESSER BAR LIFTER ARM GUIDE BRACKET
41	550067	●	●	●	●	1	押工上げ調整ネジ	PRESSER BAR LIFTER HINGE SCREW
42	543871-008	●	●	●	●	1	押工上げ調整ネジOリング	PRESSER BAR LIFTER HINGE SCREW O-RING
43	543801-006	●	●	●	●	1	押工上げ調整ネジ止めネジ	PRESSER BAR LIFTER HINGE SCREW SNAP RING
44	550066	●	●	●	●	1	糸調子作動ピン	TENSION RELEASE ACTUATING PIN



# FEED MECHANISM 1

送り 1


-7-

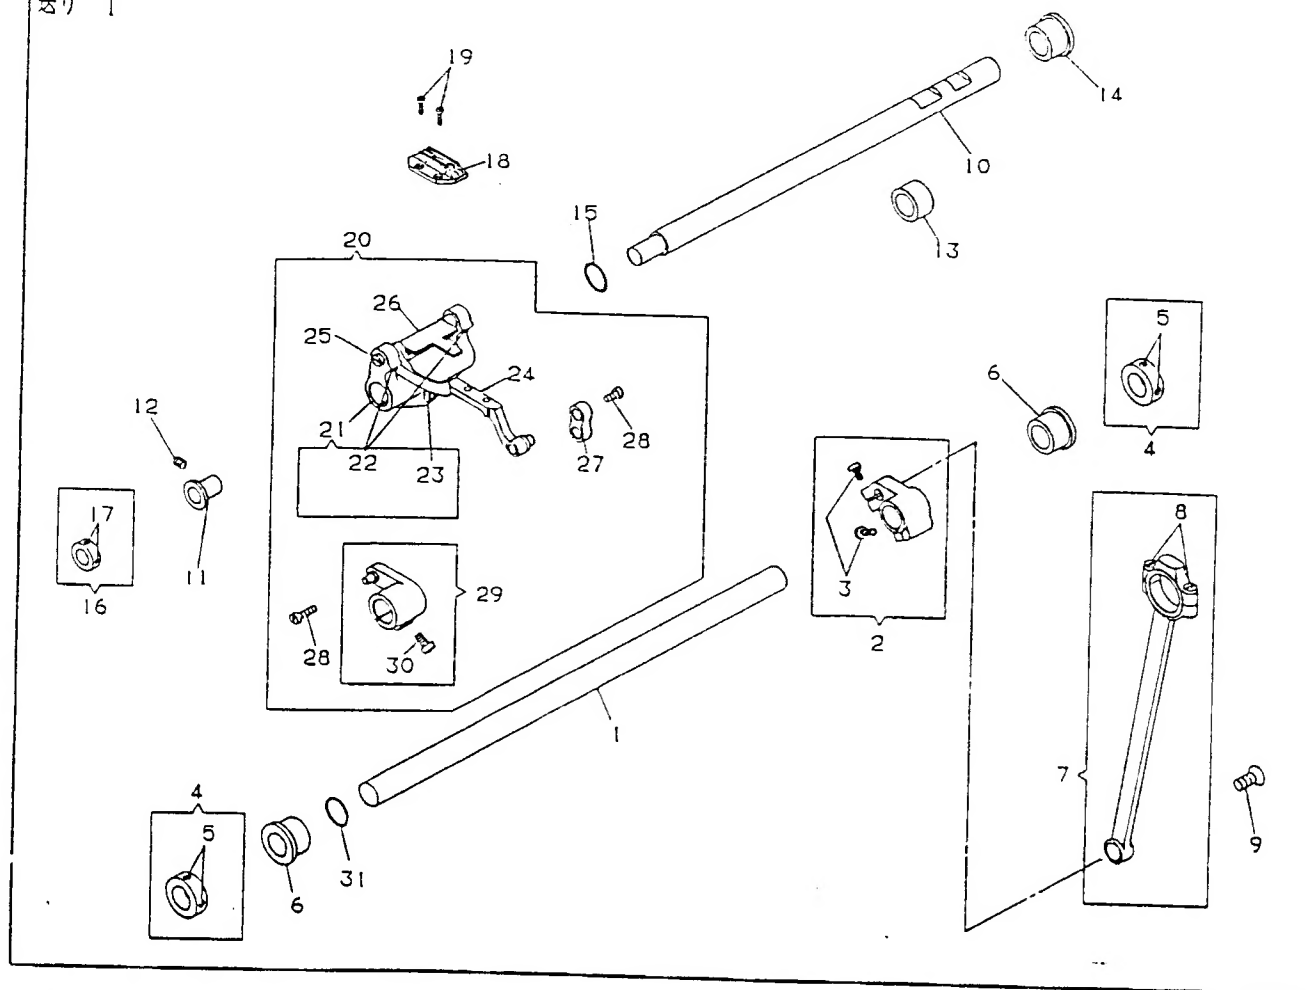

NO.	部品番号 PART NO.	0200A	0210A	0300A	0304A	数量 QTY.	名称	DESCRIPTION
1	544933	●	●	●	●	1	上下送り軸	FEED LIFTING ROCK SHAFT
2	545807	●	●	●	●	1	上下送り軸(後)止メネジ	FEED LIFTING ROCK SHAFT CRANK (BACK) COMP.
3	549183	●	●	●	●	2	上下送り軸(後)止メネジ	FEED LIFTING ROCK SHAFT CRANK (BACK) CLAMPING SCREW
4	545806	●	●	●	●	2	上下送り軸カラー(前)	FEED LIFTING ROCK SHAFT COLLAR COMP.
5	504007	●	●	●	●	4	上下送り軸カラー止メネジ	FEED LIFTING ROCK SHAFT COLLAR SET SCREW
6	545949	●	●	●	●	2	上下送り軸メタル	FEED LIFTING ROCK SHAFT FLANGED BUSHING
7	545812	●	●	●	●	1	上下送り軸クロッド(前)	FEED LIFTING ROCK SHAFT CRANK (BACK) CONNECTING ROD COMP.
8	543488	●	●	●	●	1	上下送り軸クロッド(後)	FEED LIFTING ROCK SHAFT CRANK (BACK) CONNECTING ROD COMP.
9	545059	●	●	●	●	2	上下送り軸クロッド止メネジ	FEED LIFTING ROCK SHAFT CRANK (BACK) CONNECTING ROD CAP SCREW
10	545799	●	●	●	●	1	上下送り軸クロッドヒンジスタッド	FEED LIFTING ROCK SHAFT CRANK (BACK) CONNECTING ROD HINGE STUD
11	365450	●	●	●	●	1	水平送り軸	FEED ROCK SHAFT
12	414290	●	●	●	●	1	水平送り軸	FEED ROCK SHAFT
13	545836	●	●	●	●	1	水平送り軸メタル(前)	FEED ROCK SHAFT FLANGED BUSHING (FRONT)
14	504094	●	●	●	●	1	水平送り軸メタル(前)止メネジ	FEED ROCK SHAFT FLANGED BUSHING (FRONT) SET SCREW
15	410806	●	●	●	●	1	水平送り軸メタル(中)	FEED ROCK SHAFT BUSHING (INTERMEDIATE)
16	545949	●	●	●	●	1	水平送り軸メタル(後)	FEED ROCK SHAFT FLANGED BUSHING (BACK)
17	543871-012	●	●	●	●	1	水平送り軸Oリング	FEED ROCK SHAFT O-RING
18	545837	●	●	●	●	1	水平送り軸カラー(前)	FEED ROCK SHAFT COLLAR COMP.
19	504007	●	●	●	●	2	水平送り軸カラー止メネジ	FEED ROCK SHAFT COLLAR SET SCREW
20	375445	●	●	●	●	1	送り(前)	FEED DOG (EXP.)
21	543372	●	●	●	●	1	送り(後)	FEED DOG (CON.)
22	12481	●	●	●	●	1	送り	FEED DOG
23	143174	●	●	●	●	1	送り	FEED DOG
24	504051	●	●	●	●	2	送り止メネジ	FEED DOG SCREW
25	376334	●	●	●	●	1	送り合(前)	FEED BAR COMP.
26	376384	●	●	●	●	1	送り合(中)	FEED BAR COMP.
27	376335	●	●	●	●	1	送り合キャリア(前)	FEED BAR CARRIER COMP.
28	544207-013	●	●	●	●	2	送り合ヒンジピン止メネジ	FEED BAR HINGE PIN CLAMPING SCREW
29	549028	●	●	●	●	1	送り合キャリア止メネジ	FEED BAR CARRIER CLAMPING SCREW
30	545987	●	●	●	●	1	送り合	FEED BAR
31	543482	●	●	●	●	1	送り合	FEED BAR
32	545791	●	●	●	●	1	送り合ヒンジピン	FEED BAR HINGE PIN
33	540538	●	●	●	●	1	送り合キャリアオイルウィックフェルト	FEED BAR CARRIER OIL WICK (FELT)
34	376268	●	●	●	●	1	上下送り軸リンク	FEED BAR CONNECTING LINK
35	504103	●	●	●	●	2	上下送り軸リンク止メネジ	FEED BAR CONNECTING LINK CAP SCREW
36	545808	●	●	●	●	1	上下送り軸(前)止メネジ	FEED LIFTING ROCK SHAFT CRANK (FRONT) COMP.
37	545043	●	●	●	●	1	上下送り軸(前)止メネジ	FEED LIFTING ROCK SHAFT CRANK (FRONT) CLAMPING SCREW
38	543871-012	●	●	●	●	1	上下送り軸Oリング	FEED LIFTING ROCK SHAFT O-RING

# FEED MECHANISM 2

送り 2

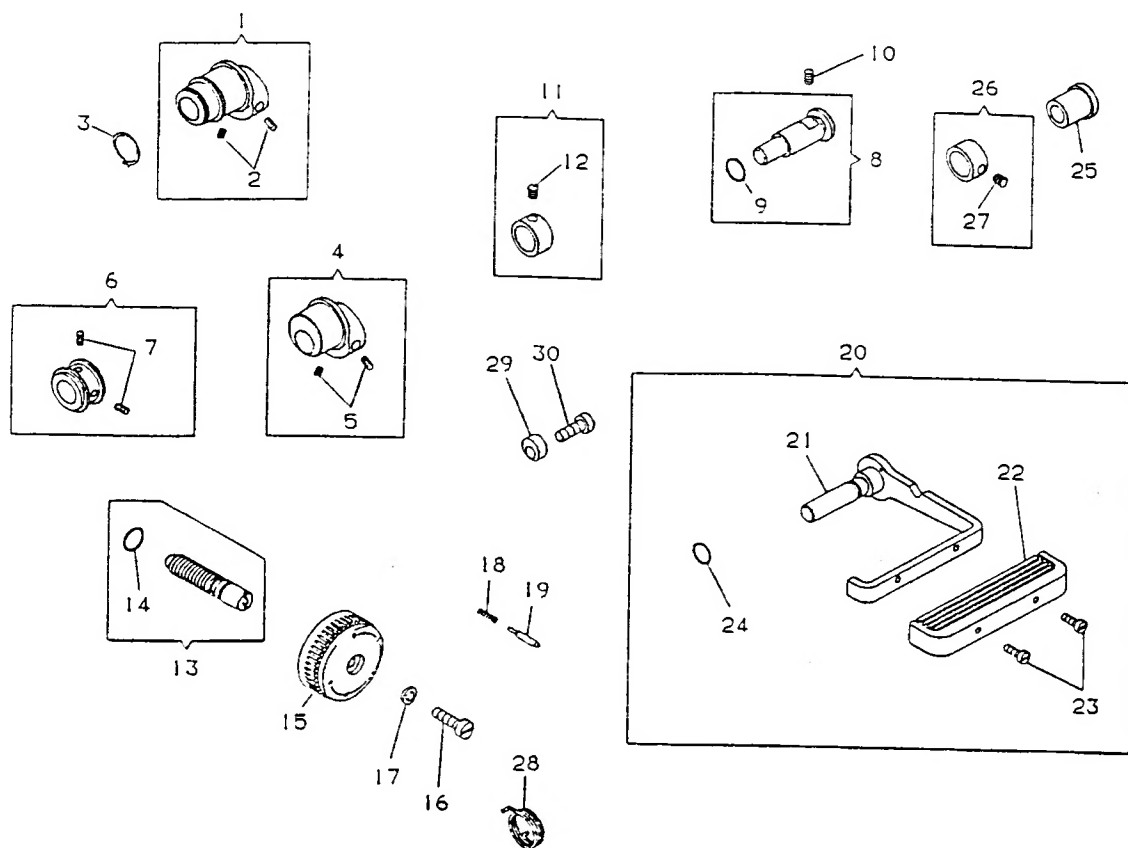


NO.	部品番号 PART NO.	D200A	D210A	D300A	D306A	数量 QTY.	名称	DESCRIPTION
1	376434	●	●	●	●	1	送りカム (組)	FEED AND FEED LIFTING ECCENTRIC COMP.
2	545313	●	●	●	●	2	送りカム止めネジ	FEED AND FEED LIFTING ECCENTRIC SET SCREW
3	543866-022	●	●	●	●	1	送りカムリング	FEED AND FEED LIFTING ECCENTRIC RING
4	550249	●	●	●	●	1	水平送りカム (組)	FEED ECCENTRIC COMP.
5	545313	●	●	●	●	2	水平送りカム止めネジ	FEED ECCENTRIC SET SCREW
6	543472	●	●	●	●	1	上下送りカム (組)	FEED LIFTING ECCENTRIC COMP.
7	504048	●	●	●	●	2	上下送りカム止めネジ	FEED LIFTING ECCENTRIC SET SCREW
8	550101	●	●	●	●	1	送り調節機構 (組)	FEED REGULATOR HINGE STUD COMP.
9	543871-010	●	●	●	●	1	送り調節機構Oリング	FEED REGULATOR HINGE STUD O-RING
10	545313	●	●	●	●	1	送り調節機構止めネジ	FEED REGULATOR HINGE STUD SET SCREW
11	368120	●	●	●	●	1	送り調節機構カラー (組)	FEED REGULATOR HINGE STUD COLLAR COMP.
12	545181	●	●	●	●	1	送り調節機構カラー止めネジ	FEED REGULATOR HINGE STUD COLLAR SET SCREW
13	550103	●	●	●	●	1	送り調節ネジ (組)	FEED REGULATING STUD COMP.
14	543871-007	●	●	●	●	1	送り調節ネジOリング	FEED REGULATING STUD O-RING
15	550108-451	●	●	●	●	1	送り調節ダイヤル	FEED REGULATING DIAL
16	550109-451	●	●	●	●	1	送り調節ダイヤル	FEED REGULATING DIAL
17	550257-383	●	●	●	●	1	送り調節ダイヤル	FEED REGULATING DIAL
18	544218-053	●	●	●	●	1	送り調節ダイヤル止めネジ	FEED REGULATING DIAL CAP SCREW
19	543803-004	●	●	●	●	1	送り調節ダイヤル止めネジ皿蓋	FEED REGULATING DIAL CAP SCREW WASHER
20	545820	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
21	368114	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
22	550110-451	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
23	550112	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
24	550115-451	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
25	544212-053	●	●	●	●	2	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
26	543871-006	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
27	368129	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
28	540633	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
29	504134	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
30	368130	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
31	540800	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN
32	549164-002	●	●	●	●	1	送り調節ダイヤルロックピン	FEED REGULATING DIAL LOCK PIN

# FEED MECHANISM 3

送り 3


-9-

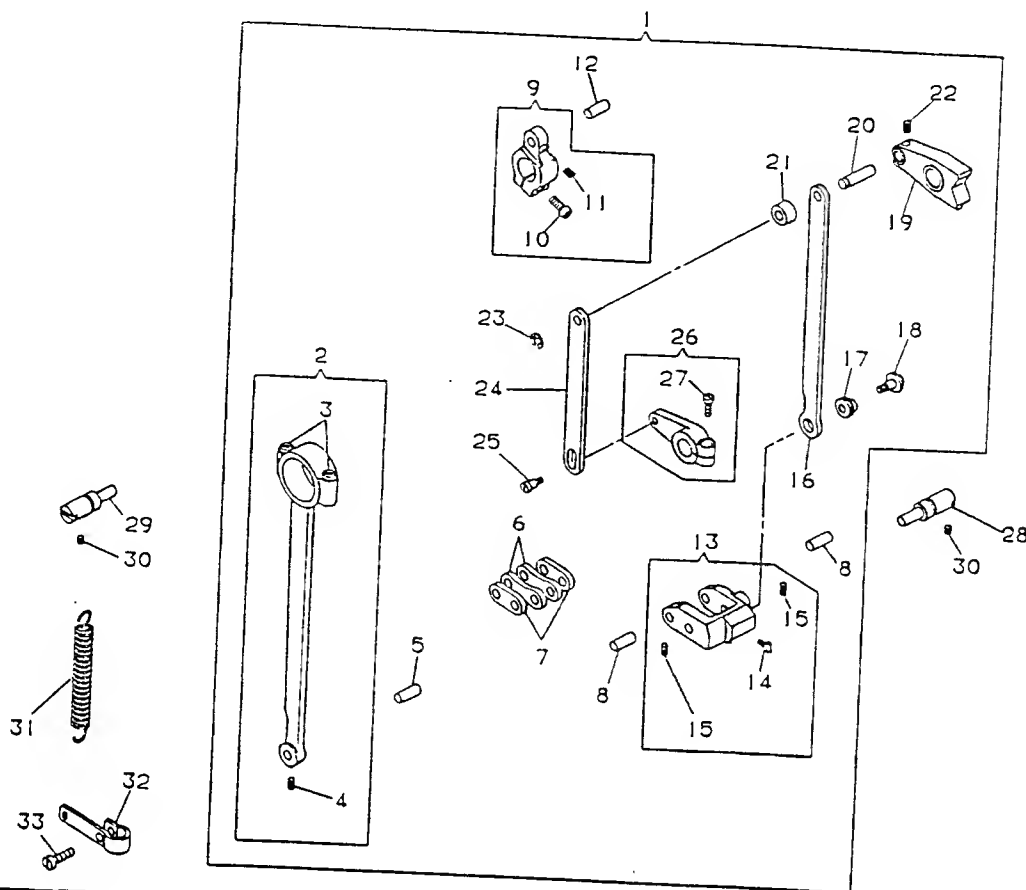

NO.	品番 PART NO.	数量 QTY.	名称	DESCRIPTION
1	550089	1	水平送りクランクロッド、送り調節器、送り調節器、送り調節レバー(大)	FEED REGULATOR AND FEED SHAFT CRANK CONNECTING ROD COMP.
2	540648	1	水平送りクランクロッド、送り調節器、送り調節器、送り調節レバー(大)	FEED REGULATOR AND FEED SHAFT CRANK CONNECTING ROD COMP.
3	545059	1	水平送りクランクロッド(大)	FEED ROCK SHAFT CRANK CONNECTING ROD COMP.
4	545181	1	水平送りクランクロッド(大)	FEED ROCK SHAFT CRANK CONNECTING ROD COMP.
5	540649	1	水平送りクランクロッド(大)	FEED ROCK SHAFT CRANK CONNECTING ROD COMP.
6	540655	1	水平送りクランクロッド(大)	FEED ROCK SHAFT CRANK CONNECTING ROD COMP.
7	540656	1	水平送りクランクロッド(大)	FEED ROCK SHAFT CRANK CONNECTING ROD COMP.
8	376239	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
9	540644	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
10	543404	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
11	549183	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
12	545181	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
13	540650	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
14	550092	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
15	550252	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
16	544138	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
17	376240	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
18	550094	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
19	368103	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
20	368105	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
21	550095	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
22	550255	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
23	550096	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
24	550097	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
25	544204-002	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
26	543801-006	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
27	550098	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
28	549288	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
29	368111	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
30	414737	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
31	540653	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
32	410746	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
33	504029	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
	550256	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
	550100	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW
	544213-054	1	送り調節器リンク止メネジ	FEED ROCK SHAFT CRANK CONNECTING ROD CAP SCREW

# UPRIGHT SHAFT AND ROTATING HOOK SHAFT

堅軸, 下軸

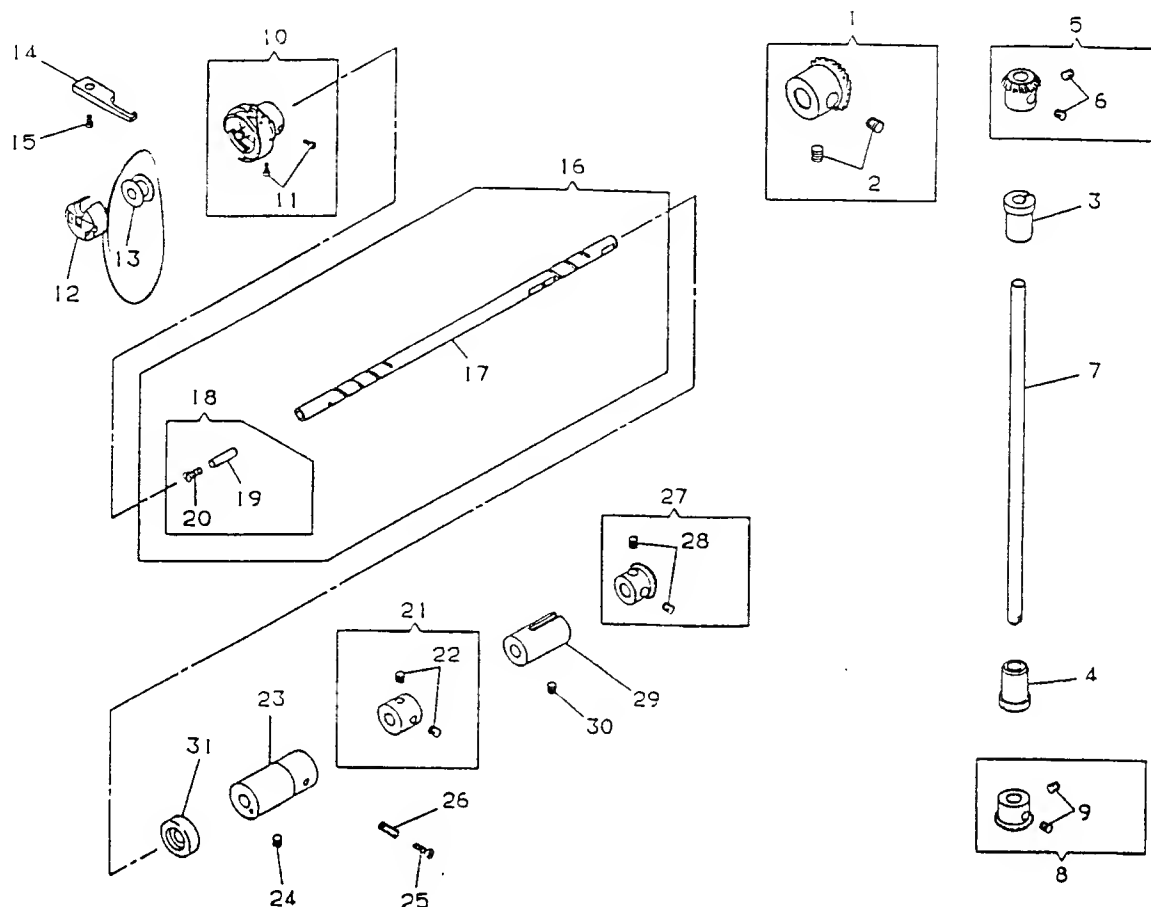


NO.	部品番号 PART NO.	0200A 0210A 0300A 0304A	数量 QTY.	名称	DESCRIPTION
1	545757	●	1	上軸歯車(組)	ARM SHAFT (HORIZONTAL) BEVEL GEAR COMP.
2	504066	●	2	上軸歯車止メネジ	ARM SHAFT (HORIZONTAL) BEVEL GEAR SET SCREW
3	545767	●	1	堅軸メタル(上)	ARM SHAFT (UPRIGHT) BUSHING (UPPER)
4	545766	●	1	堅軸メタル(下)	ARM SHAFT (UPRIGHT) BUSHING (LOWER)
5	545765	●	1	堅軸歯車(上)(組)	ARM SHAFT (UPRIGHT) BEVEL GEAR (UPPER) COMP.
6	504101	●	2	堅軸歯車(上)止メネジ	ARM SHAFT (UPRIGHT) BEVEL GEAR (UPPER) SET SCREW
7	550118	●	1	堅軸	ARM SHAFT (UPRIGHT)
8	545764	●	1	堅軸歯車(下)(組)	ARM SHAFT (UPRIGHT) BEVEL GEAR (LOWER) COMP.
9	504101	●	2	堅軸歯車(下)止メネジ	ARM SHAFT (UPRIGHT) BEVEL GEAR (LOWER) SET SCREW
10	414126	●	1	外ガマ, 中ガマ(組)	ROTATING HOOK AND ROTATING HOOK BOBBIN CASE HOLDER COMP.
	543381	●	1	外ガマ, 中ガマ(組)	ROTATING HOOK AND ROTATING HOOK BOBBIN CASE HOLDER COMP.
11	544244	●	2	外ガマ止メネジ	ROTATING HOOK SCREW
12	544745	●	1	ネピンケース(組)	ROTATING HOOK BOBBIN CASE COMP.
13	55623	●	1	ネピン	ROTATING HOOK BOBBIN
14	545881	●	1	中ガマ止メ	ROTATING HOOK BOBBIN CASE HOLDER POSITION BRACKET
15	504084	●	1	中ガマ止メネジ	ROTATING HOOK BOBBIN CASE HOLDER POSITION BRACKET SCREW
16	550119	●	1	下軸(組)	ROTATING HOOK SHAFT COMP.
17	550120	●	1	下軸	ROTATING HOOK SHAFT
18	505648	●	1	下軸オイルフィルター(組)	ROTATING HOOK SHAFT OIL FILTER COMP.
19	143042	●	1	下軸オイルフィルターウェック	ROTATING HOOK SHAFT OIL FILTER WICK (FELT)
20	505647	●	1	下軸軸止メネジ	ROTATING HOOK SHAFT OIL FILTER WICK HOLDER
21	368386	●	1	下軸カラー(組)	ROTATING HOOK SHAFT OIL RETAINING COLLAR COMP.
22	504101	●	2	下軸カラー止メネジ	ROTATING HOOK SHAFT OIL RETAINING COLLAR SET SCREW
23	550121	●	1	下軸メタル(前)	ROTATING HOOK SHAFT BUSHING (FRONT)
24	504002	●	1	下軸メタル(前)止メネジ	ROTATING HOOK SHAFT BUSHING (FRONT) SET SCREW
25	544246	●	1	流量調節ネジ	ROTATING HOOK OIL FLOW REGULATING THUMB SCREW
26	544958	●	1	流量調節ネジスプリング	ROTATING HOOK OIL FLOW REGULATING THUMB SCREW SPRING
27	545887	●	1	下軸歯車(組)	ROTATING HOOK SHAFT BEVEL GEAR (LEFT HAND SPIRAL)
28	504101	●	2	下軸歯車止メネジ	ROTATING HOOK SHAFT BEVEL GEAR SET SCREW
29	550122	●	1	下軸メタル(後)	ROTATING HOOK SHAFT BUSHING (BACK)
30	504002	●	1	下軸メタル(後)止メネジ	ROTATING HOOK SHAFT BUSHING (BACK) SET SCREW
31	550123	●	1	下軸オイルシール	ROTATING HOOK SHAFT OIL SEAL

# LUBRICATING MECHANISM

給油, 還流


-11-

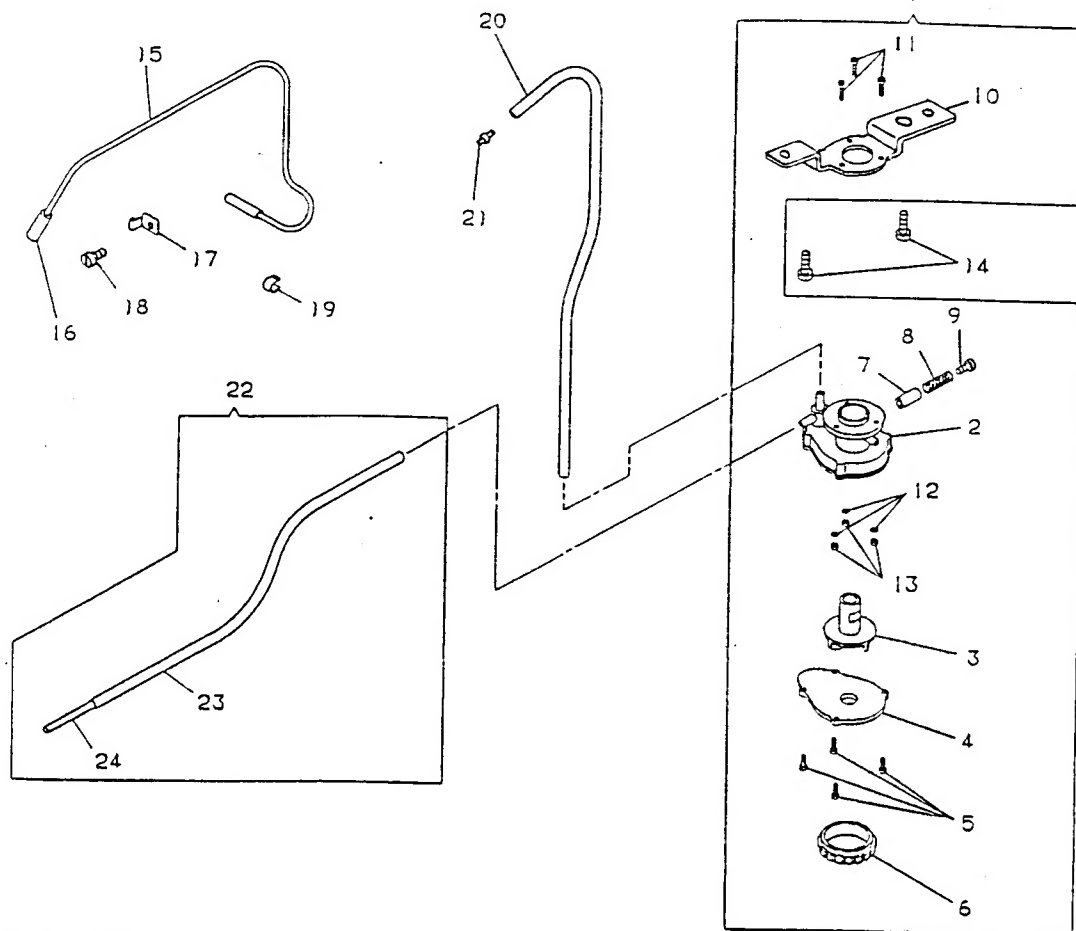

NO.	部品番号 PART NO.	0200A	0210A	0300A	0308A	数量 QTY.	名称	DESCRIPTION
1	550124	●	●	●	●	1	オイルポンプ (組)	OIL PUMP (CENTRIFUGAL) COMP.
2	544968	●	●	●	●	1	オイルポンプ (体)	OIL PUMP (CENTRIFUGAL)
3	544969	●	●	●	●	1	インペラー	OIL PUMP (CENTRIFUGAL) IMPELLER
4	544970	●	●	●	●	1	オイルポンプ蓋	OIL PUMP (CENTRIFUGAL) COVER
5	544248	●	●	●	●	4	オイルポンプ蓋止めネジ	OIL PUMP (CENTRIFUGAL) COVER SCREW
6	544971	●	●	●	●	1	オイルポンプスクリーン	OIL PUMP (CENTRIFUGAL) SCREEN
7	544972	●	●	●	●	1	還流ピストン	OIL REMOVING PISTON
8	410710	●	●	●	●	1	還流ピストンバネ	OIL REMOVING PISTON SPRING
9	414716	●	●	●	●	1	還流ピストンバネ押エネジ (組)	OIL REMOVING PISTON SPRING SCREW COMP.
10	550125	●	●	●	●	1	オイルポンプブラケット	OIL PUMP (CENTRIFUGAL) BRACKET
11	544211-004	●	●	●	●	3	オイルポンプブラケット止めネジ	OIL PUMP (CENTRIFUGAL) BRACKET SCREW
12	543814-001	●	●	●	●	3	オイルポンプブラケット止めネジ蓋金	OIL PUMP (CENTRIFUGAL) BRACKET SCREW WASHER
13	541164-001	●	●	●	●	3	オイルポンプブラケット止めネジナット	OIL PUMP (CENTRIFUGAL) BRACKET SCREW NUT
14	544213-001	●	●	●	●	2	オイルポンプ (組) 止めネジ	OIL PUMP (CENTRIFUGAL) SCREW
15	368137	●	●	●	●	1	還流チューブ (組)	OIL REMOVING TUBE COMP.
16	16380	●	●	●	●	1	還流チューブスクリーン	OIL REMOVING LINT SCREEN
17	543371	●	●	●	●	1	還流チューブ実エ	OIL REMOVING TUBE RETAINING CLAMP
18	544212-001	●	●	●	●	1	還流チューブ実エ止めネジ	OIL REMOVING TUBE RETAINING CLAMP SCREW
19	543334	●	●	●	●	1	還流チューブ止めバネ	OIL TUBE CLAMP
20	550128	●	●	●	●	1	オイルパイプ (上側用)	OIL TUBE (ARM SHAFT)
21	544964	●	●	●	●	1	オイルパイプ (上側用) 継手	OIL TUBE (ARM SHAFT) JOINT
22	414085	●	●	●	●	1	オイルチューブ (下側用) (組)	OIL TUBE (ROTATING HOOK SHAFT) COMP.
23	410773	●	●	●	●	1	オイルチューブ (下側用)	OIL TUBE (ROTATING HOOK SHAFT)
24	543332	●	●	●	●	1	オイルチューブ (下側用) 継手	OIL TUBE (ROTATING HOOK SHAFT) JOINT

## ACCESSORIES AND ATTACHMENTS


付属品

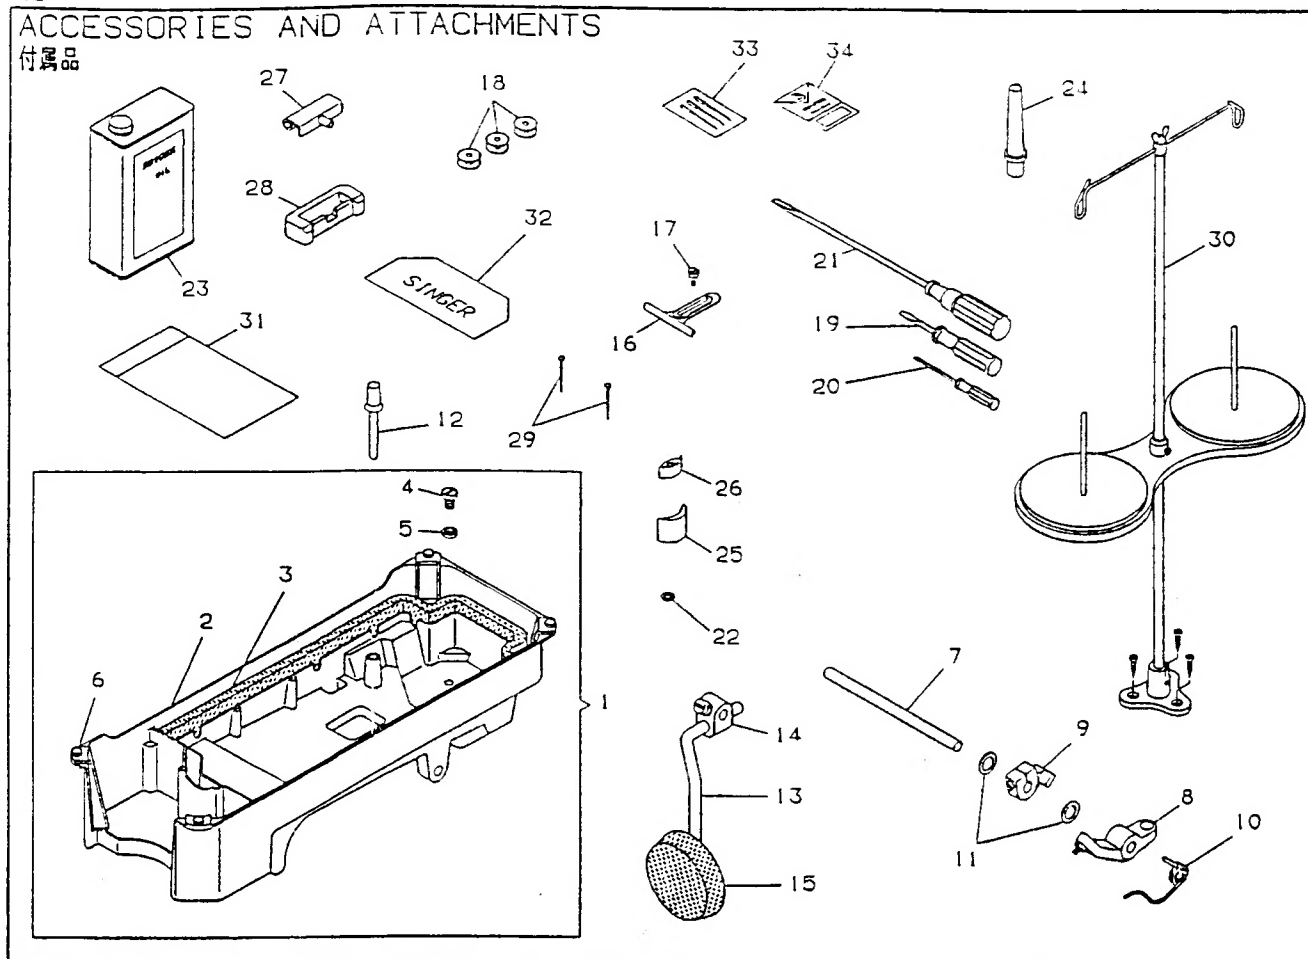

NO.	部品番号 PART NO.	0200A	0210A	0300A	0302A	数量 QTY.	名称	DESCRIPTION
1	550157	●	●	●	●	1	油受け(蓋)	MACHINE BASE AND OIL RESERVOIR COMP.
2	550158	●	●	●	●	1	油受け	MACHINE BASE AND OIL RESERVOIR
3	544978	●	●	●	●	1	油受けガスケット	MACHINE BASE AND OIL RESERVOIR GASKET
4	545036	●	●	●	●	1	油受けドレーンネジ	MACHINE BASE AND OIL RESERVOIR OIL DRAIN PLUG SCREW
5	545754	●	●	●	●	1	油受けドレーンネジパッキン	MACHINE BASE AND OIL RESERVOIR OIL DRAIN PLUG SCREW GASKET
6	368377	●	●	●	●	4	マシン油受けクッション	MACHINE REST (RUBBER)
7	368267	●	●	●	●	1	原当座	ROCK SHAFT
8	545915	●	●	●	●	1	原当座(蓋)	ROCK SHAFT CRANK COMP.
9	545922	●	●	●	●	1	原当座止メ(蓋)	ROCK SHAFT STOP DOG COMP.
10	545921	●	●	●	●	1	原当座バネ	ROCK SHAFT SPRING
11	543823-001	●	●	●	●	2	スラストワッシャー	THRUST WASHER
12	550159	●	●	●	●	1	原上ゲプランジャー	BELL CRANK PLUNGER COMP.
13	544895	●	●	●	●	1	原当座	ROCK SHAFT KNEE ARM
14	376436	●	●	●	●	1	原当座実エ(蓋)	ROCK SHAFT KNEE ARM HUB COMP.
15	414115	●	●	●	●	1	原当座(蓋)	ROCK SHAFT KNEE ARM PLATE COMP.
16	541515	●	●	●	●	1	クロスガイド	CLOTH GUIDE
17	504030	●	●	●	●	1	クロスガイド止メネジ	CLOTH GUIDE SCREW
18	55623	●	●	●	●	3	ネピン	ROTATING HOOK BOBBIN
19	368317	●	●	●	●	1	ドライバー(大)	SCREW DRIVER (LARGE)
20	541514	●	●	●	●	1	ドライバー(小)	SCREW DRIVER (SMALL)
21	548701	●	●	●	●	1	ドライバー(長)	SCREW DRIVER (LONG)
22	545754	●	●	●	●	1	油受けドレーンネジパッキン	MACHINE BASE AND OIL RESERVOIR OIL DRAIN PLUG SCREW GASKET
23	410154	●	●	●	●	1	油カン(C型オイル750cc)	OIL CAN (750cc. FILLED WITH SINGER TYPE "C" OIL)
24	410186	●	●	●	●	1	レストピン	MACHINE REST PIN
25	540520	●	●	●	●	2	油受けクッション(大)(取付金)	MACHINE BASE AND OIL RESERVOIR CUSHION (FRONT) (EXP.)
26	368379	●	●	●	●	2	油受けクッション(大)(取付金)	MACHINE BASE AND OIL RESERVOIR CUSHION (FRONT) (DOM.)
27	540521	●	●	●	●	2	油受けクッション(小)(取付金)	MACHINE BASE AND OIL RESERVOIR CUSHION (BACK) (EXP.)
28	368380	●	●	●	●	2	油受けクッション(小)(取付金)	MACHINE BASE AND OIL RESERVOIR CUSHION (BACK) (DOM.)
29	540522	●	●	●	●	2	マシンヒンジ	MACHINE HINGE CONNECTION
30	540523	●	●	●	●	2	マシンヒンジ受け(取付)	MACHINE HINGE CONNECTION CUSHION (EXP.)
31	368381	●	●	●	●	2	マシンヒンジ受け(取付)	MACHINE HINGE CONNECTION CUSHION (DOM.)
32	546920	●	●	●	●	2	マシンヒンジ受け(取付)	MACHINE HINGE CONNECTION CUSHION WIRE NAIL
33	505656-007	●	●	●	●	1	2本糸交合(蓋)	THREAD UNWINDER (FOR TWO SPOOLS) COMP.
34	414301	●	●	●	●	1	付属品袋	ACCESSORY PACK
35	414407	●	●	●	●	1	マシンカバー(取付)	MACHINE COVER
36	376430	●	●	●	●	1	針パック(N1955-01#14,3本入)	NEEDLE PACK (N1955-01#14) (EXP.)
37	376431	●	●	●	●	1	針パック(N1955-01#16,3本入)	NEEDLE PACK (N1955-01#16) (EXP.)
38	N15150-110	●	●	●	●	3	針(16X95#10)(取付)	NEEDLE (16X95#10) (DOM.)
39	N15150-114	●	●	●	●	3	針(16X95#14)(取付)	NEEDLE (16X95#14) (DOM.)
40	N19550-121	●	●	●	●	3	針(135X65#16)	NEEDLE (135X65#16) (EXP.)

# PARTS AVAILABLE AT EXTRA CHARGE

別売品

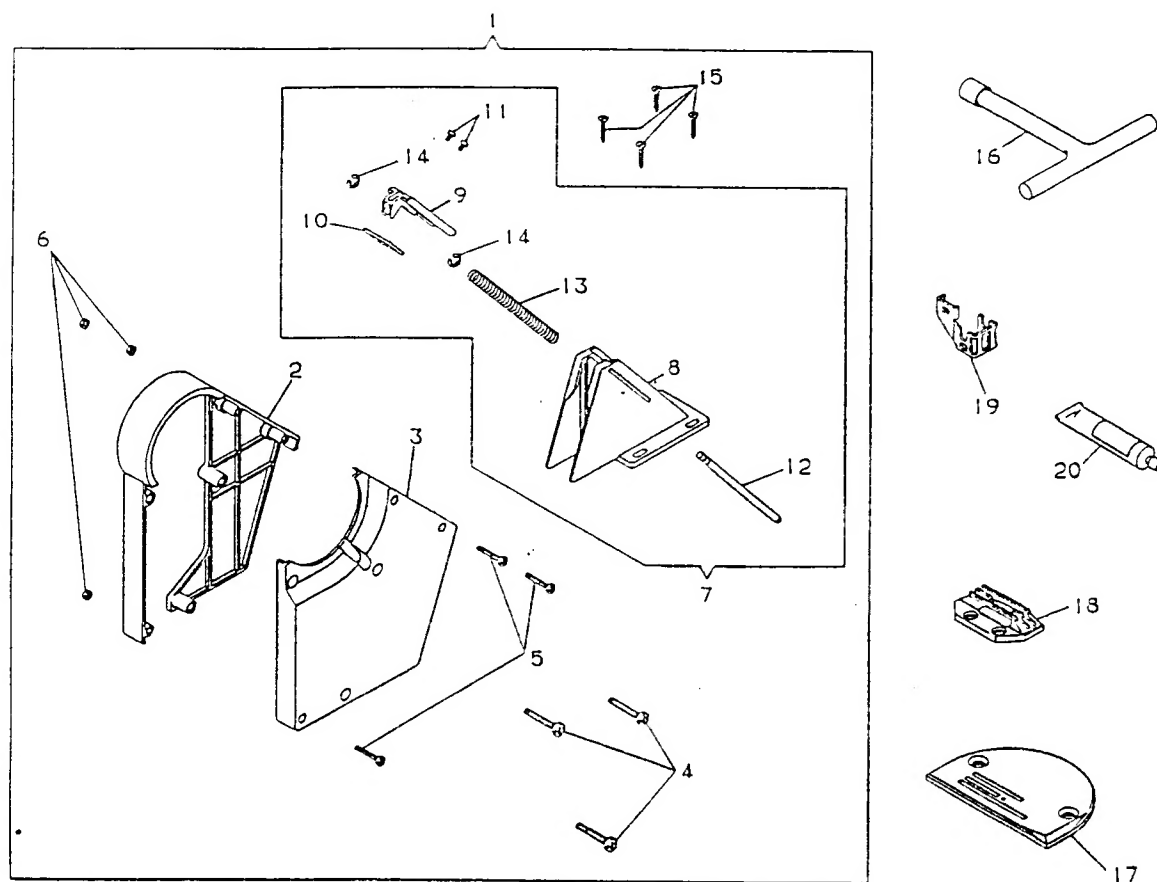

NO.	部品番号 PART NO.	0200A	0210A	0300A	0300A	数量 QTY.	名称	DESCRIPTION
1	550162-451	●	●	●	●	1	ベルトガード(前)	BELT GUARD COMP.
2	550163-451	●	●	●	●	1	ベルトガード(左)	BELT GUARD (LEFT)
3	550164-451	●	●	●	●	1	ベルトガード(右)	BELT GUARD (RIGHT)
4	544213-058	●	●	●	●	3	ベルトガード止めネジ	BELT GUARD SCREW
5	544212-007	●	●	●	●	3	ベルトガード止メネジ	BELT GUARD SCREW
6	541165-001	●	●	●	●	3	ベルトガード止メネジナット	BELT GUARD SCREW NUT
7	550165-451	●	●	●	●	1	ベルトガード(下)(前)	BELT GUARD (LOWER) COMP.
8	550166-451	●	●	●	●	1	ベルトガード(下)	BELT GUARD (LOWER)
9	550167-451	●	●	●	●	1	ベルトガードスライド	BELT GUARD SLIDE
10	550168	●	●	●	●	1	ベルトガードスライドプレート	BELT GUARD SLIDE PLATE
11	544211-053	●	●	●	●	2	ベルトガードスライド止メネジ	BELT GUARD SLIDE SCREW
12	550169	●	●	●	●	1	ベルトガードスライドシャフト	BELT GUARD SLIDE SHAFT
13	368279	●	●	●	●	1	ベルトガードスライドバネ	BELT GUARD SLIDE SPRING
14	408913	●	●	●	●	2	ベルトガードスライドシャフト止メネジ	BELT GUARD SLIDE SHAFT SNAP RING
15	549398	●	●	●	●	4	ベルトガード(下)ボネジ	BELT GUARD (LOWER) WOOD SCREW
16	545945	●	●	●	●	1	ボックスレンチ	BOX WRENCH
17	52032-452	●	●	●	●	1	喉板	THROAT PLATE
	142060-452	●	●	●	●	1	喉板	THROAT PLATE
	142061-452	●	●	●	●	1	喉板	THROAT PLATE
18	149057	●	●	●	●	1	送り	FEED DOG
19	376461	●	●	●	●	1	ニードルガード	NEEDLE GUARD
20	414155	●	●	●	●	1	シール剤	SEAL COMPOUND

Part No.378889-102 (195)  
Printed in Japan